


**Mitsubishi Outlander 2013- & 2016-
Mitsubishi Outlander PHEV 09/2013- & 2016-**



Partnr.: MT-115-DHU

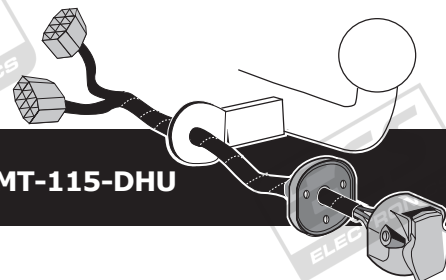


- Fitting instructions electric wiring kit tow bar with 13-P socket up to DIN/ISO Norm 11446.
- We would expressly point out that assembly not carried out properly by a competent installer will result in cancellation of any right to damage compensation, in particular those arising by virtue of the product liability act.
- Contents of these kits and their fitting manuals are subject to alteration without notice, please ensure that these instructions are read and fully understood before commencing installation.
- Do not overload circuits; the maximum loads per connection are detailed in this manual.
- Attention! Before Installation, please read this manual carefully and inform your customer to consult the vehicle owners manual to check for any vehicle modifications required before towing.
- In the event of functional problems, troubleshooting must be limited to about 0.5 hours, contact the technical support:
t.skinner@ecs-electronics.com / 07440 202 052.





Part list

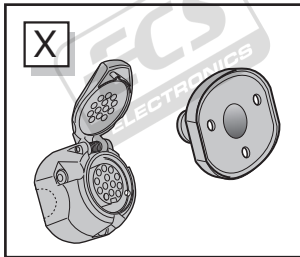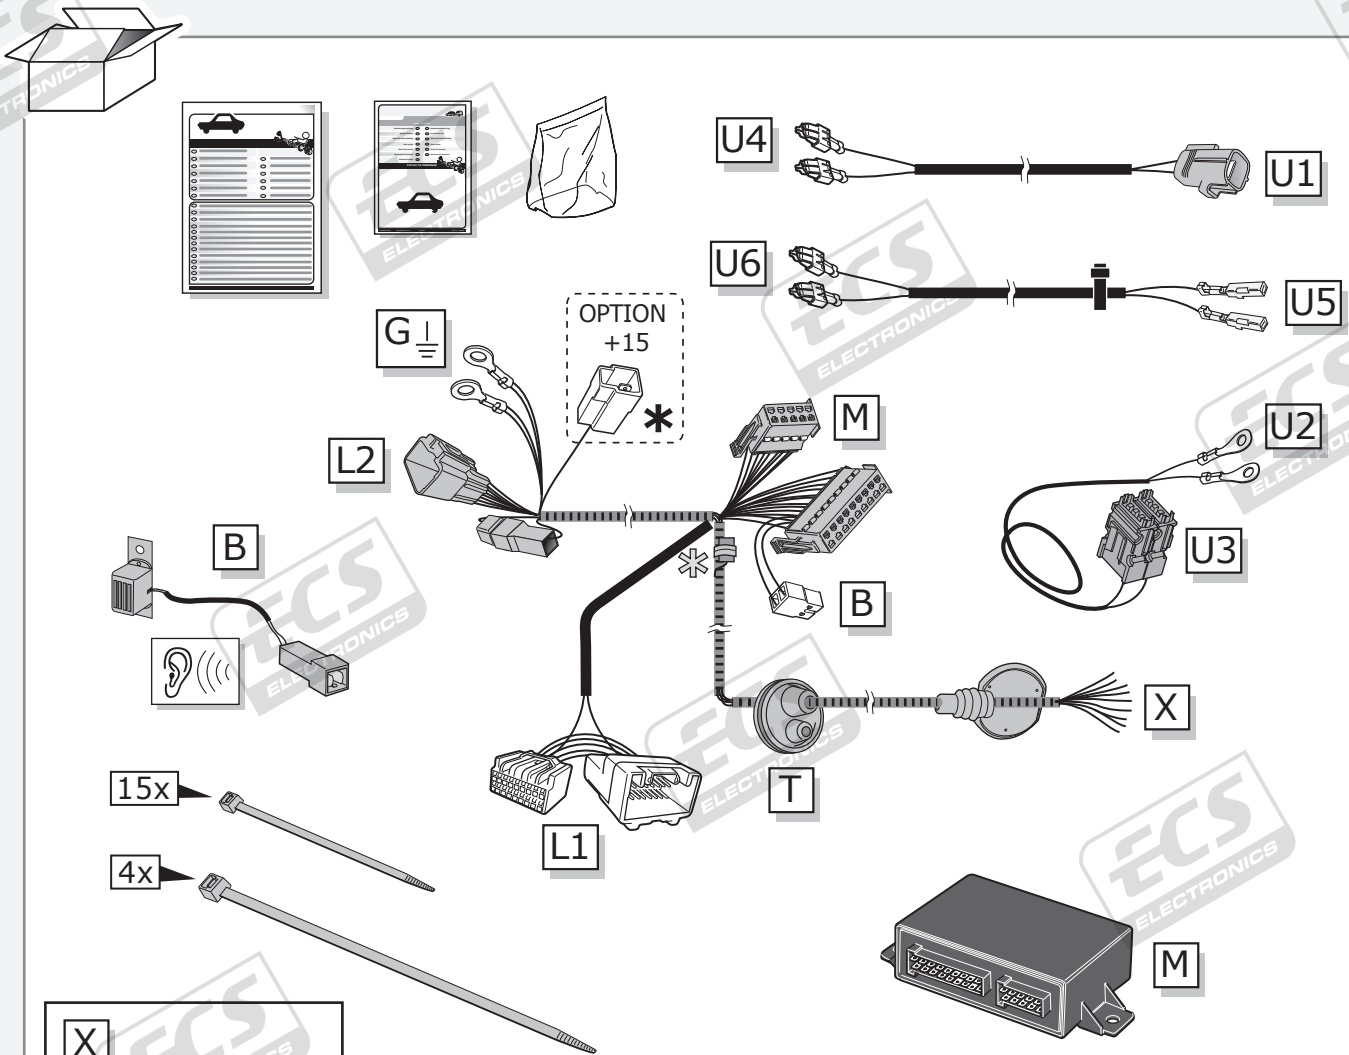







*** OPTION +15**
preparation for

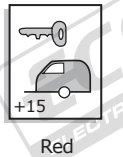


*** OPTION P.D.C.**

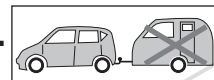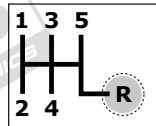


= 12V / Max. 500 m Amp.

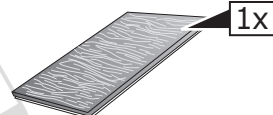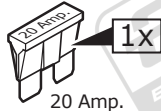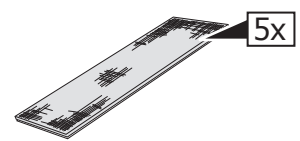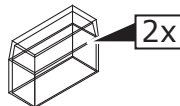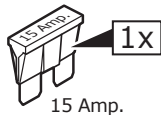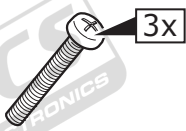


**Mitsubishi Outlander
2013- & 2016-**

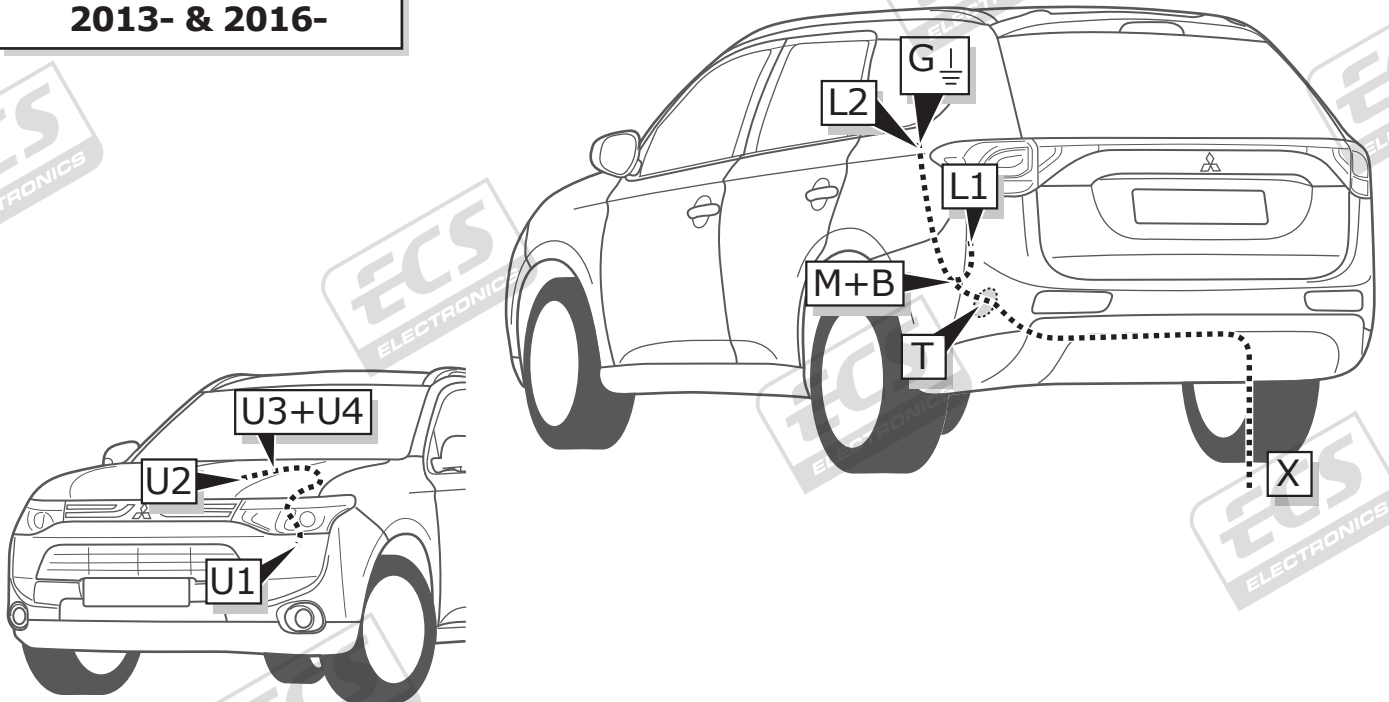


**Mitsubishi Outlander
PHEV 09/2013-
&
PHEV 2016-**

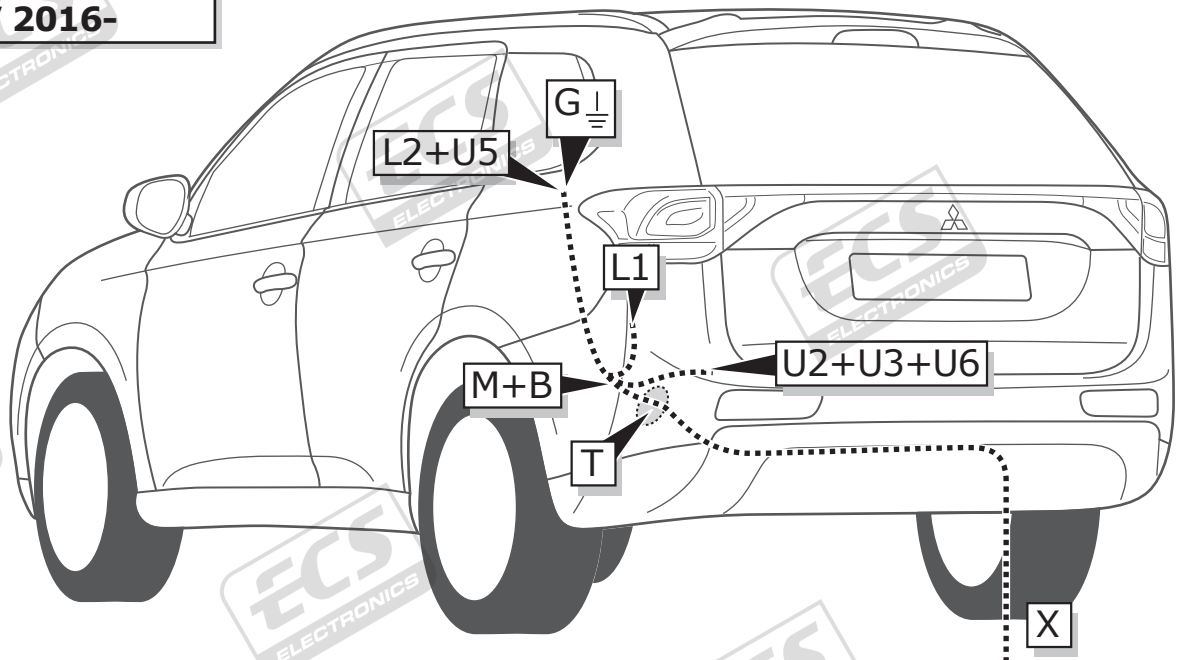


1

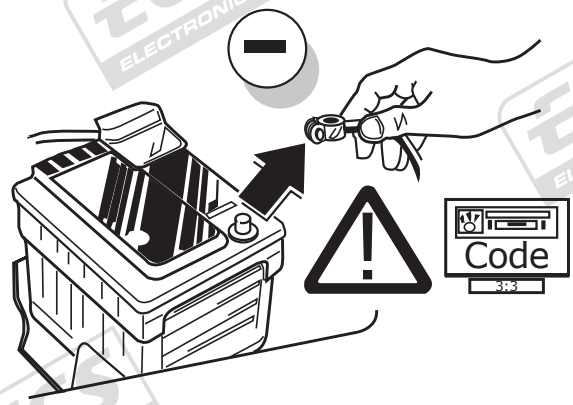


2




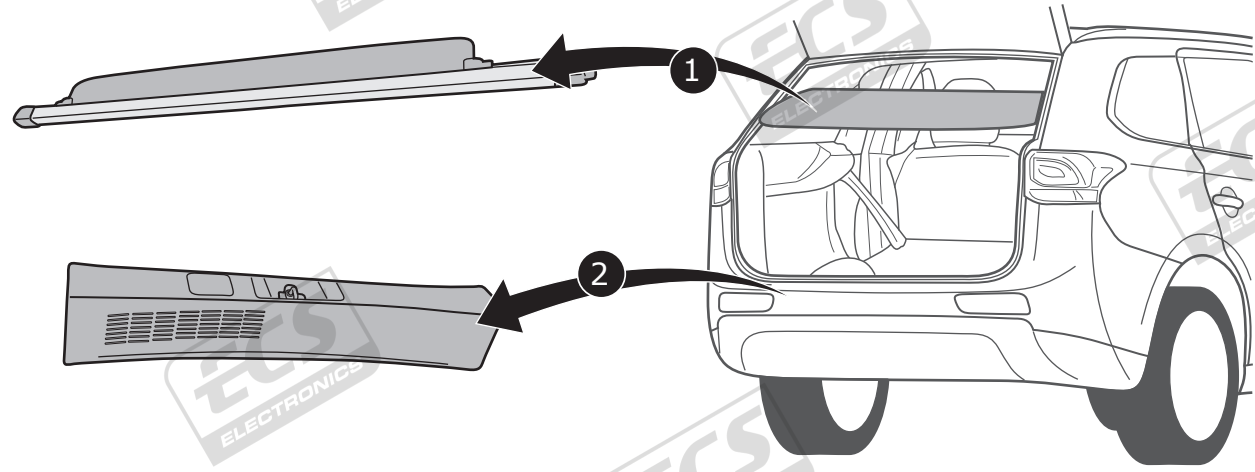


3

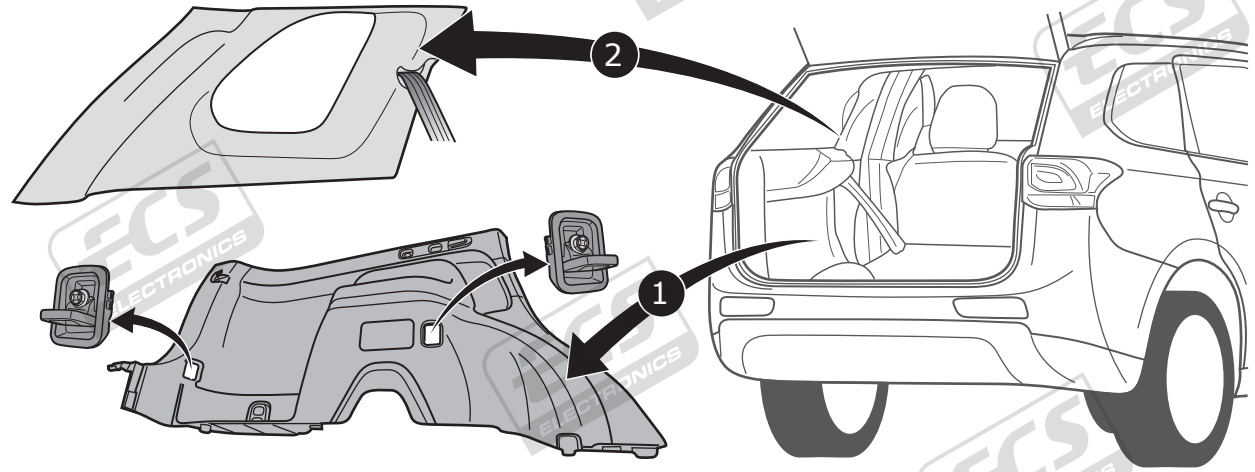

4

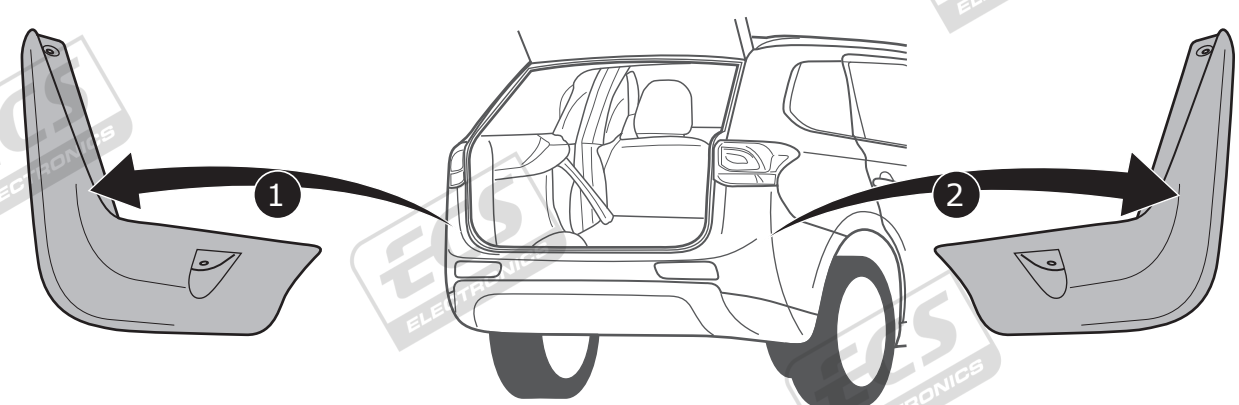

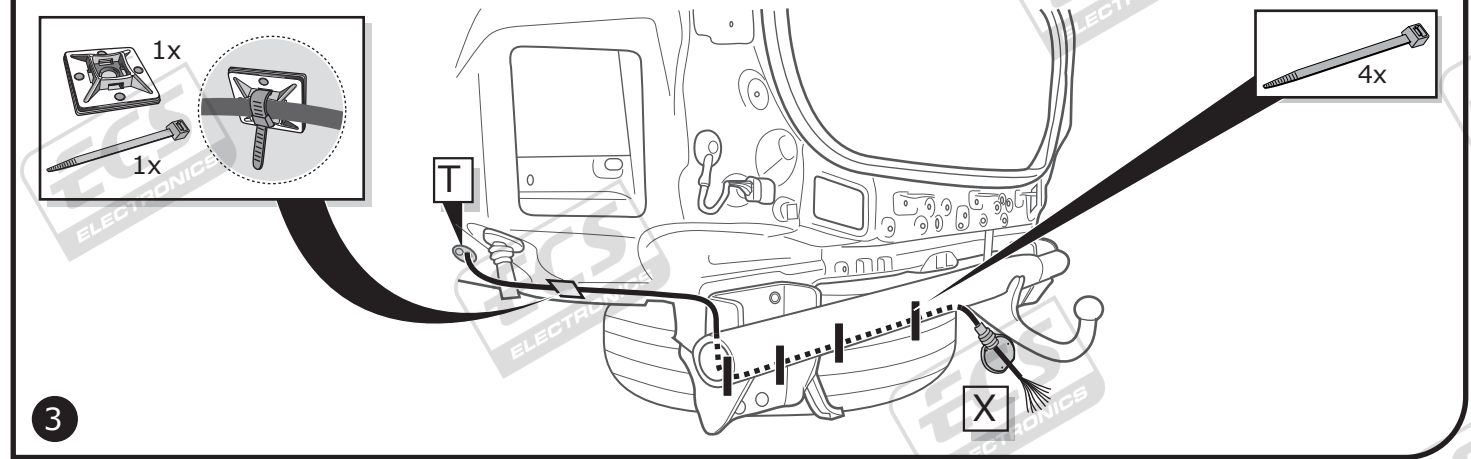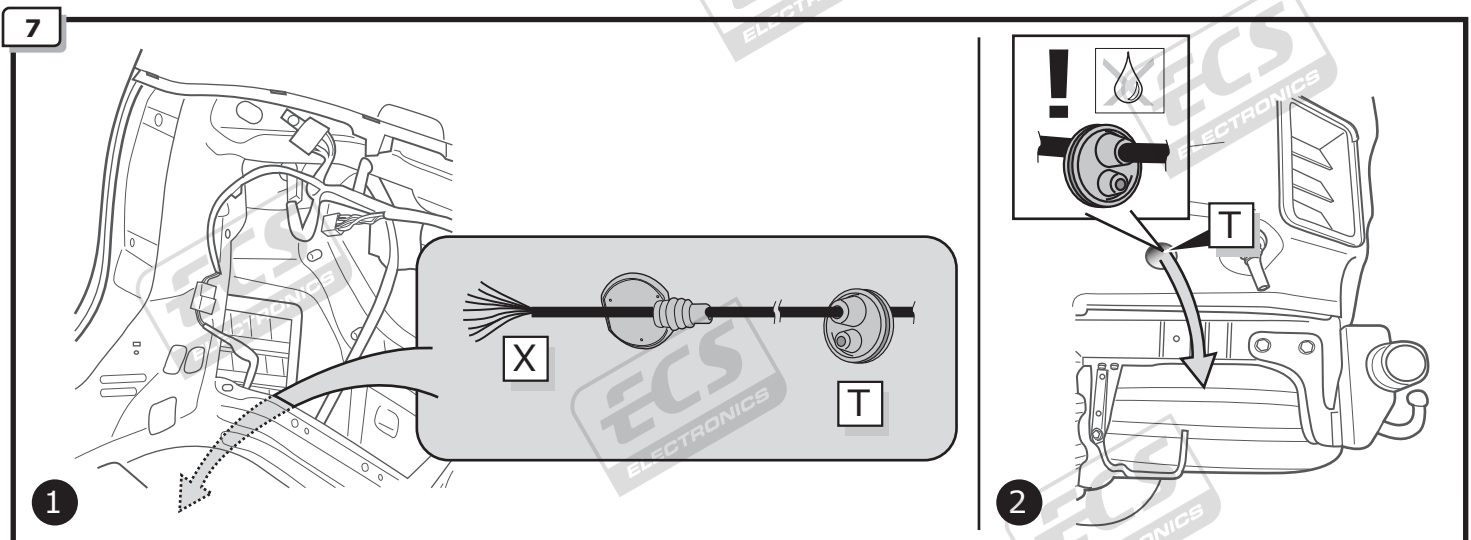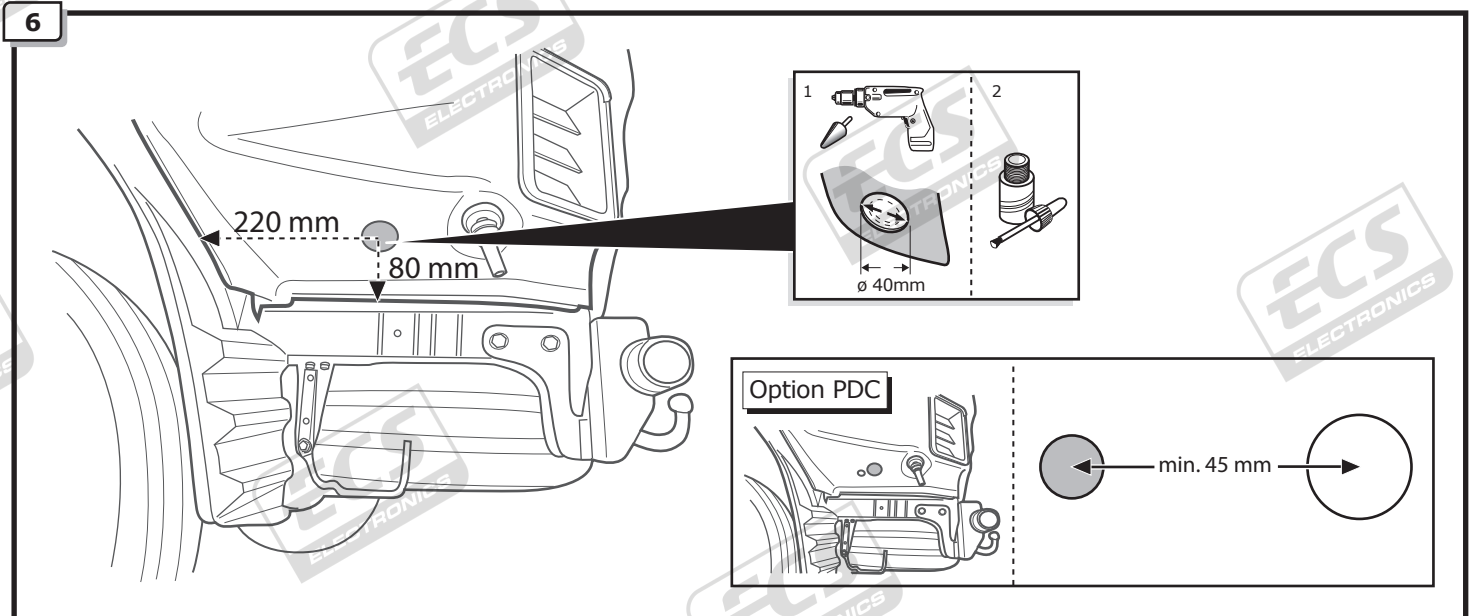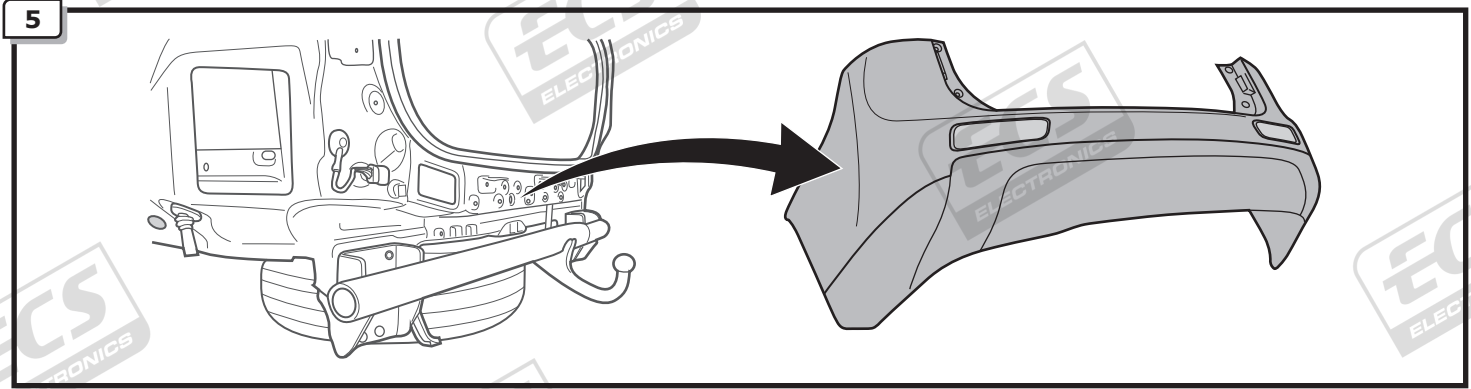

SOCKET CONNECTION




Pag. 14


8

Option 1


1

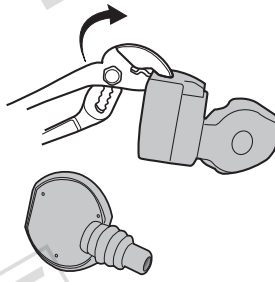


2

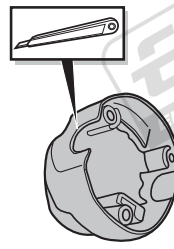

3

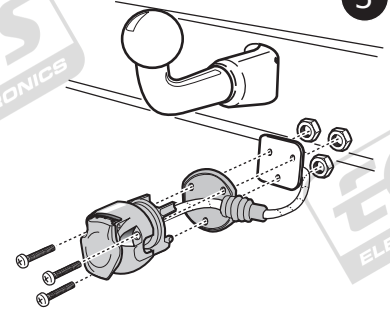


4

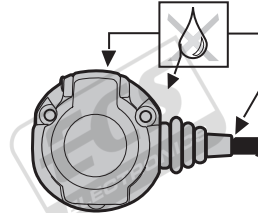


8A

Option 2


1

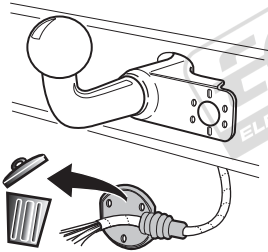


2

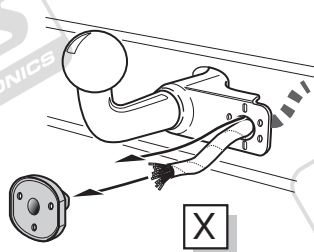

3

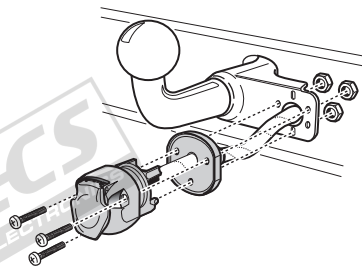


4

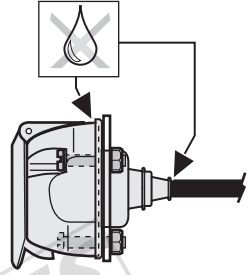




ONLY for PHEV models 2016-

9

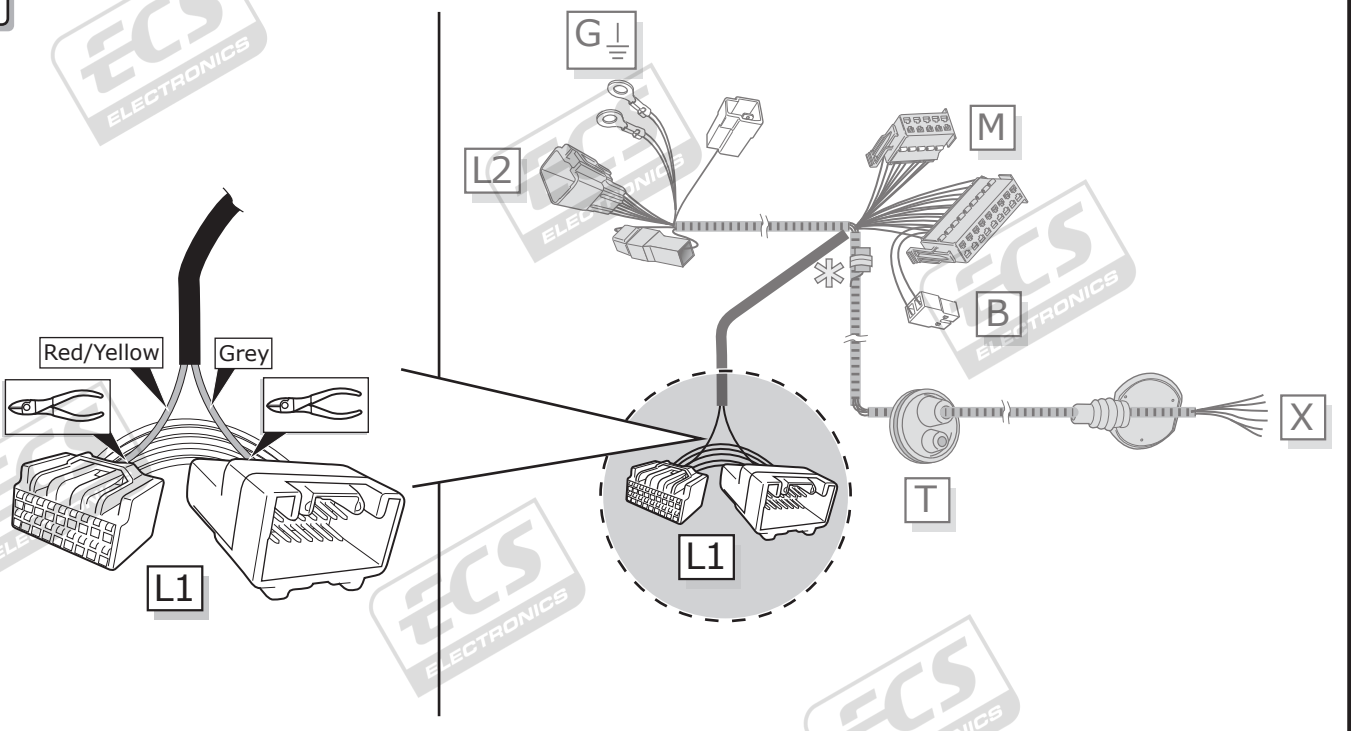


ONLY for PHEV models 2016-

10

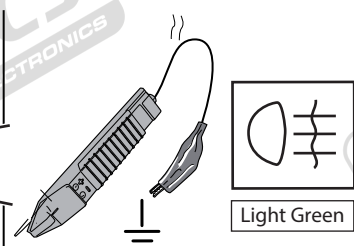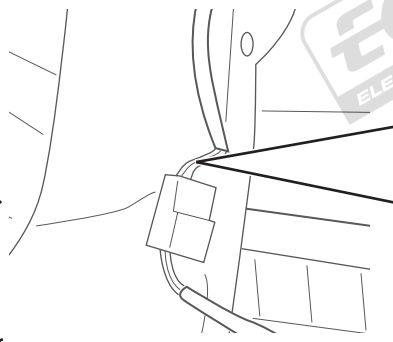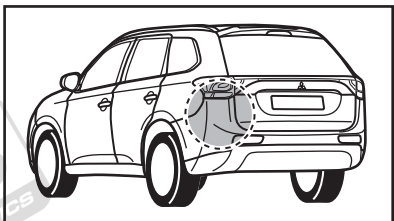



1

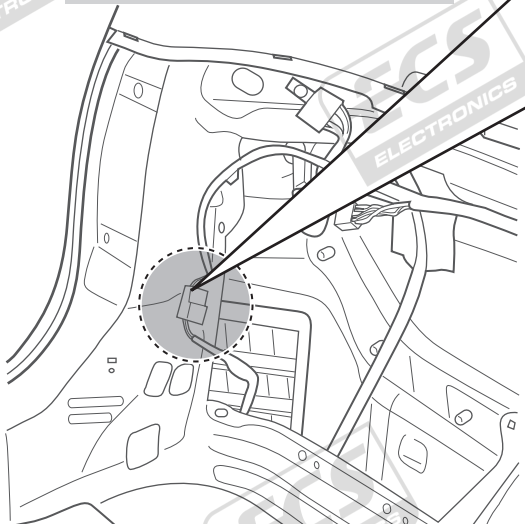

2



Light Green

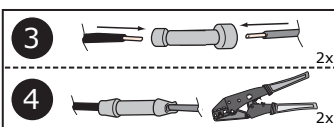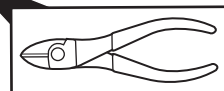

3

4



Red/Yellow




Grey

L1





12

11

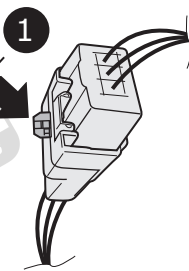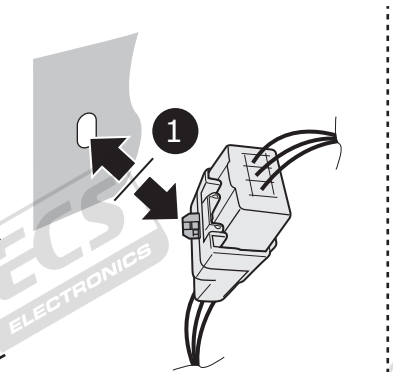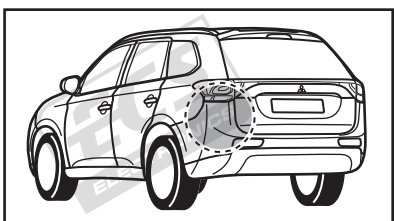

1

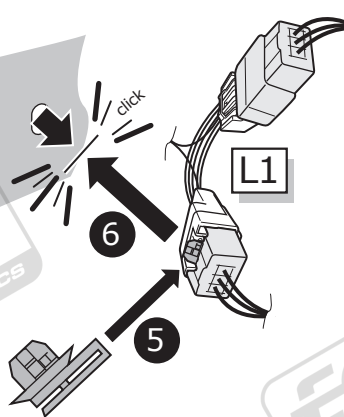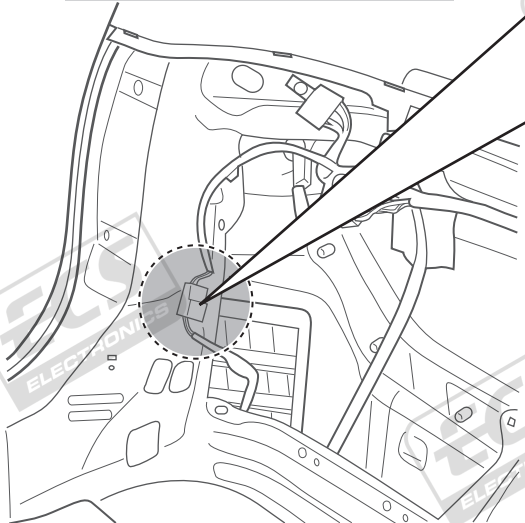


5

6

click

L1

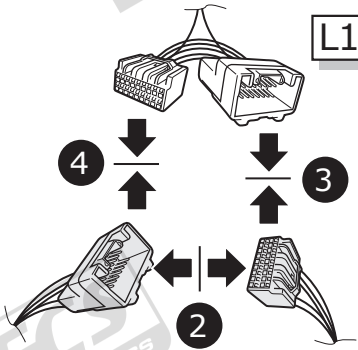


4

L1

3


2

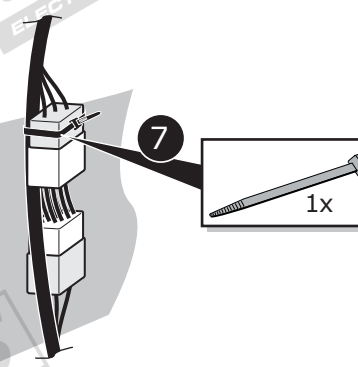


7

1x


12

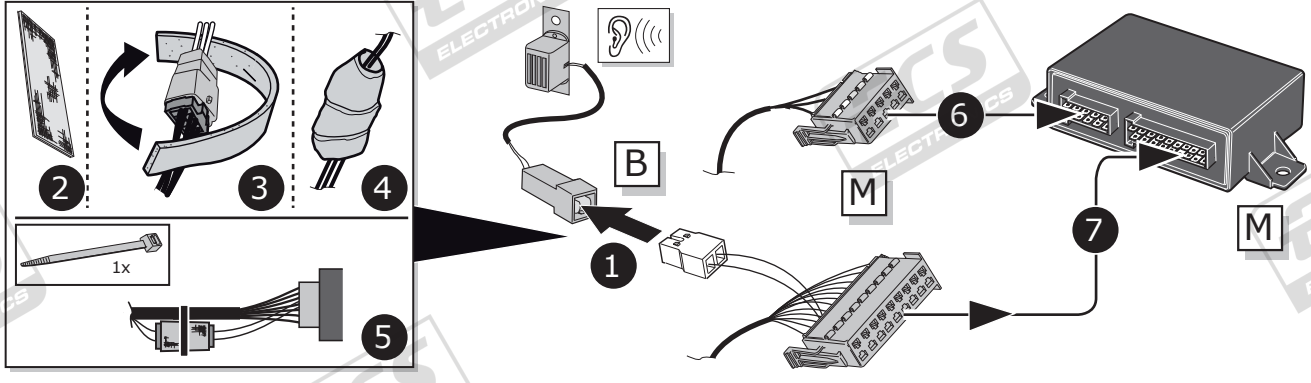




13

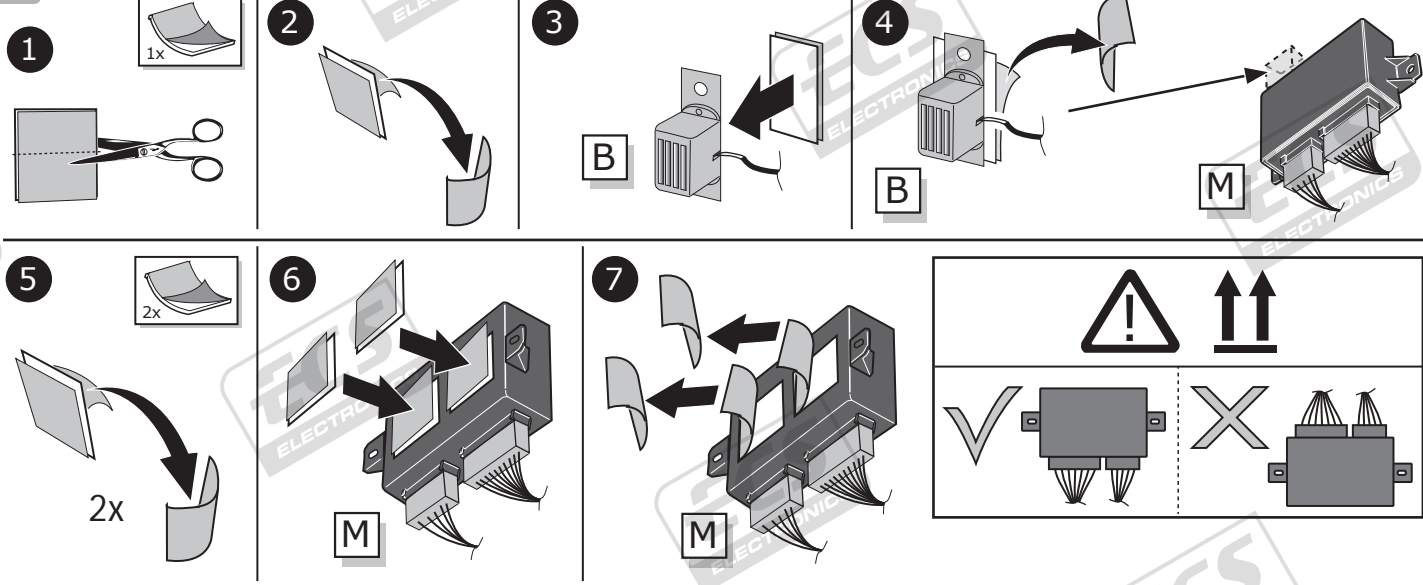




14

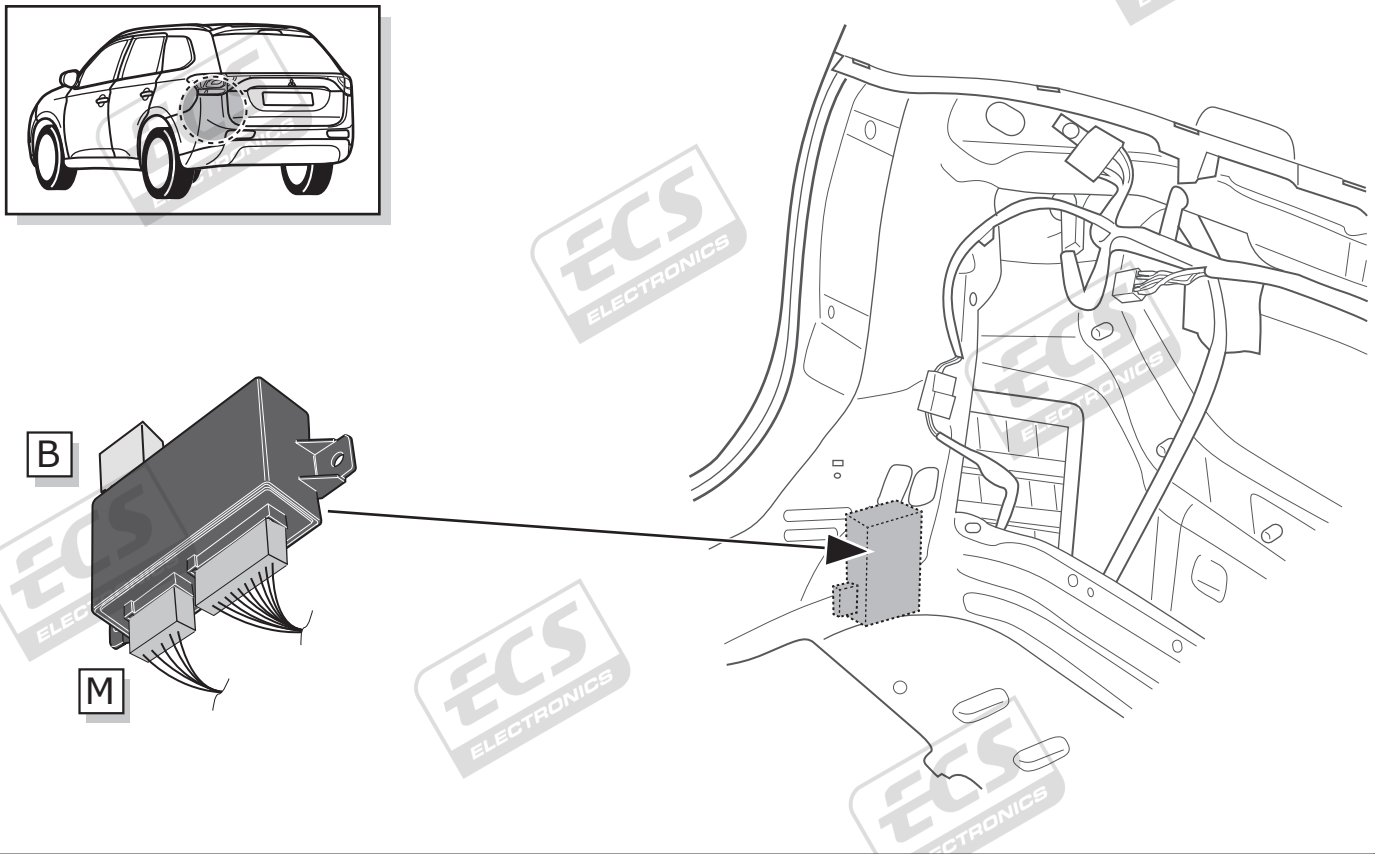


OPTION 1: without electrical tail gate opener

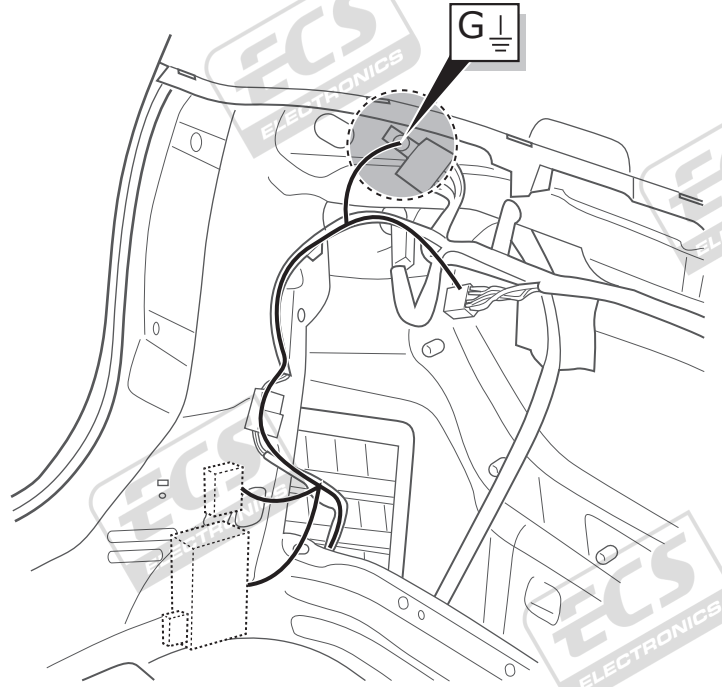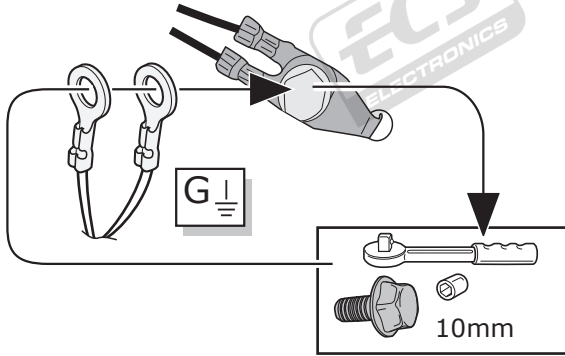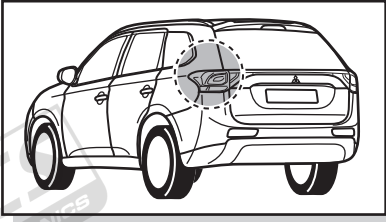

OPTION 2: with electrical tail gate opener

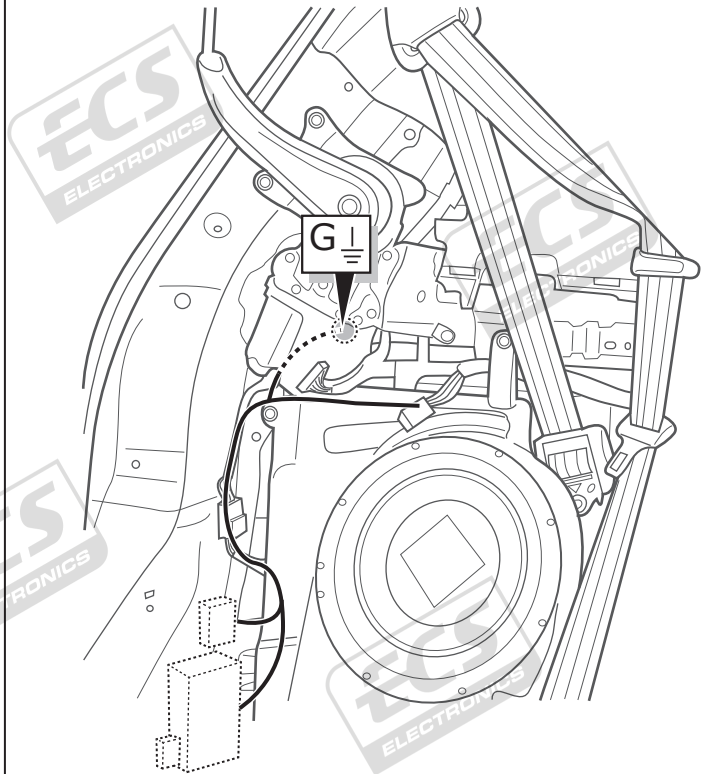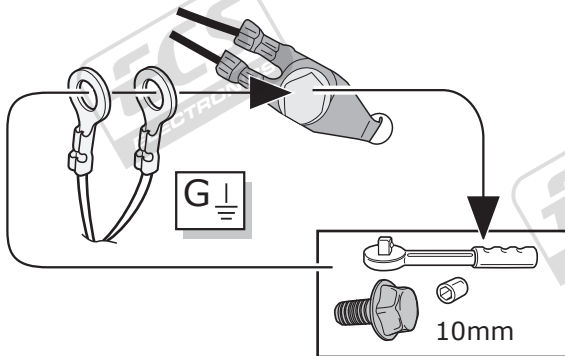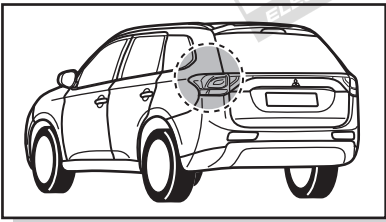

Option 1:
Mitsubishi Outlander 2013- & 2016-


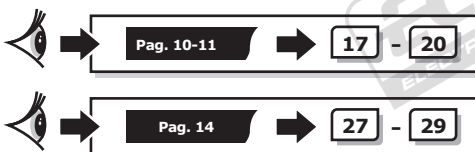


Option 2:
Mitsubishi Outlander
PHEV 09/2013-
&
PHEV 2016-





Option 1: Outlander 2013- & 2016-






17

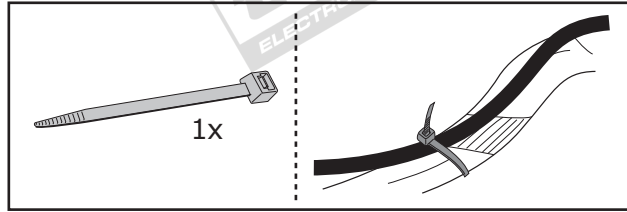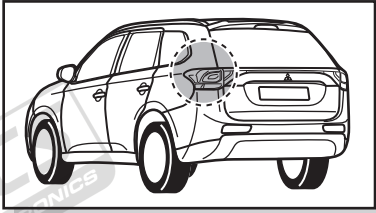

1

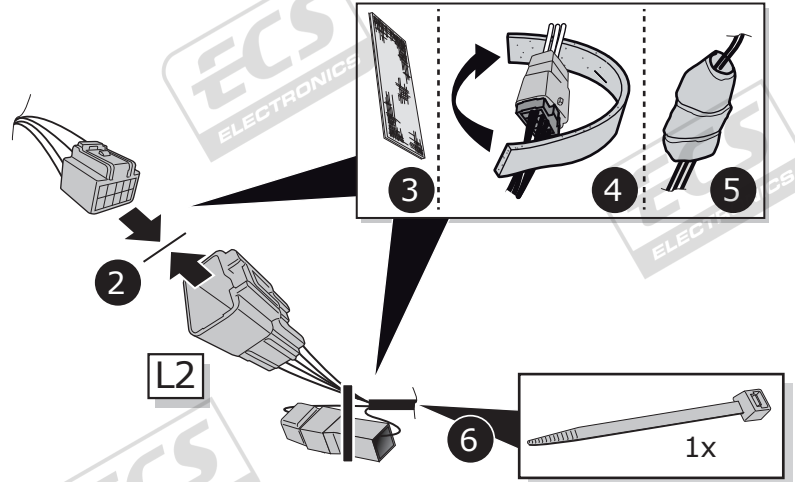
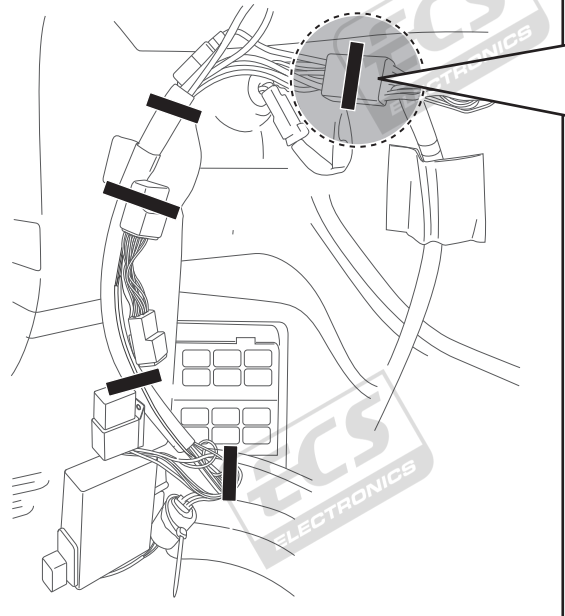


18

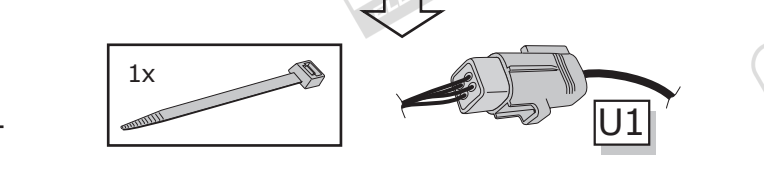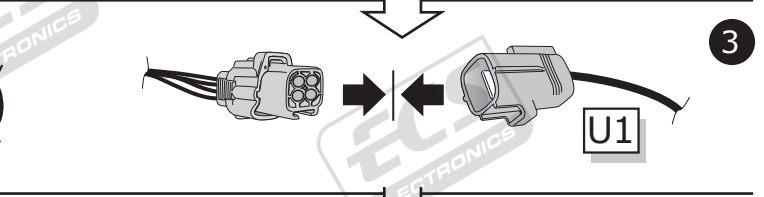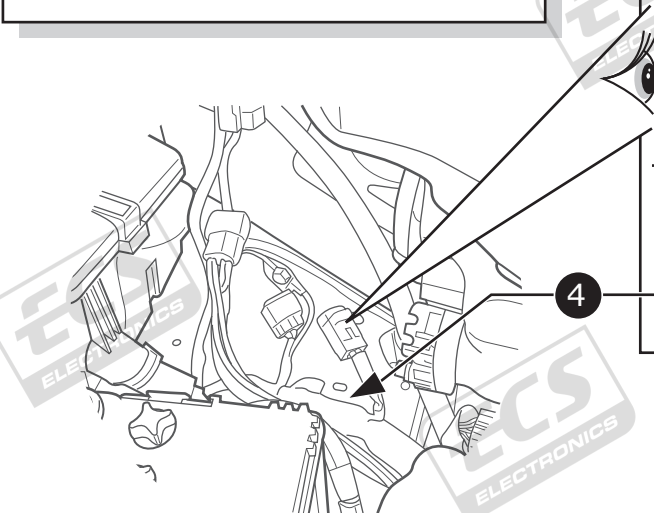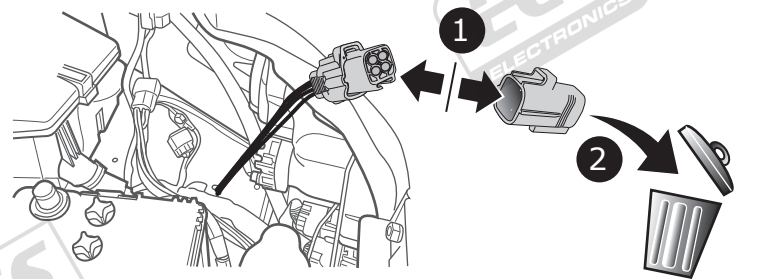
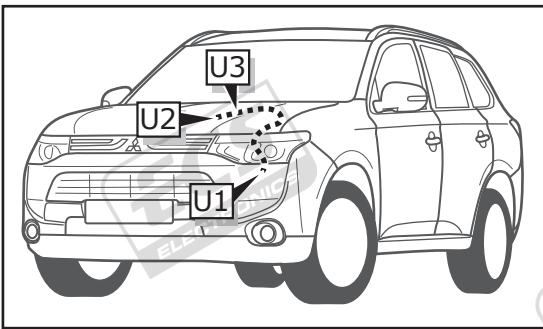


Option 1: Outlander 2013- & 2016-

19

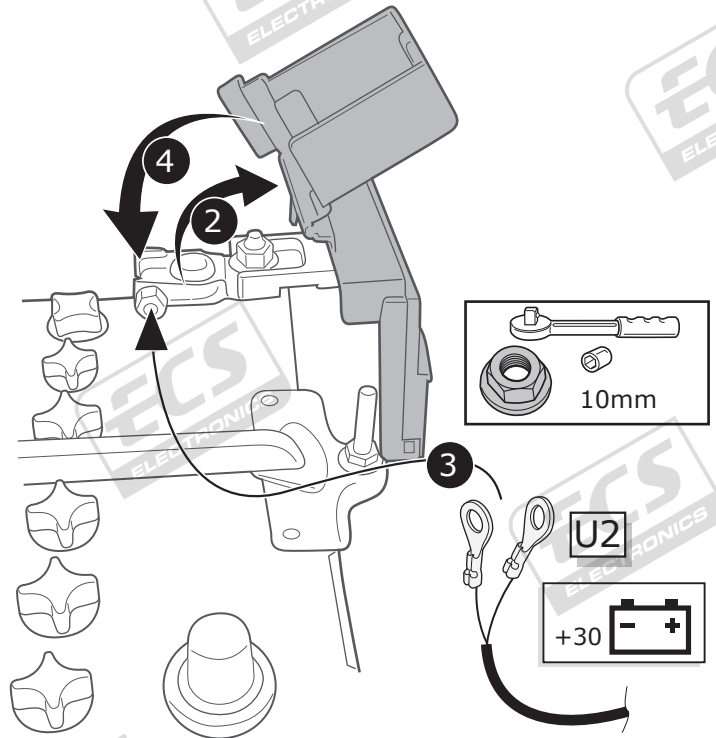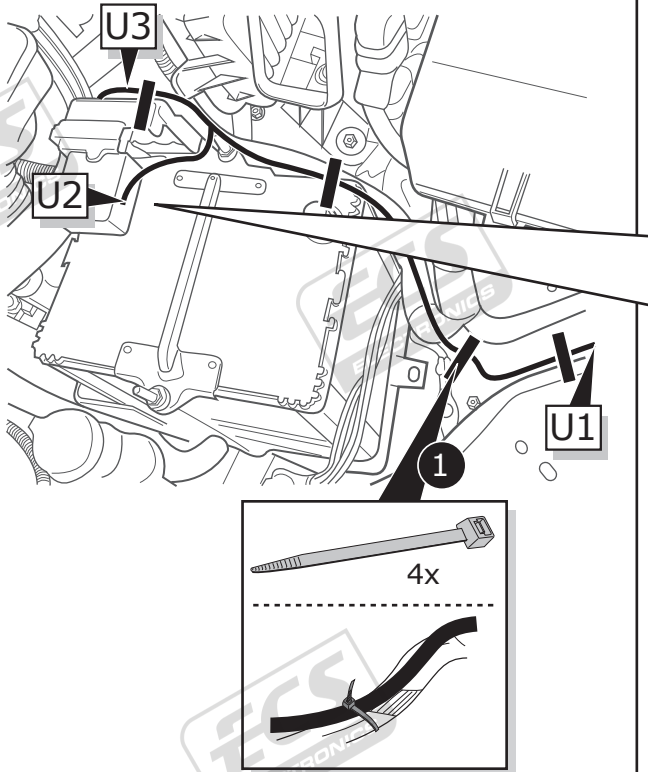

20

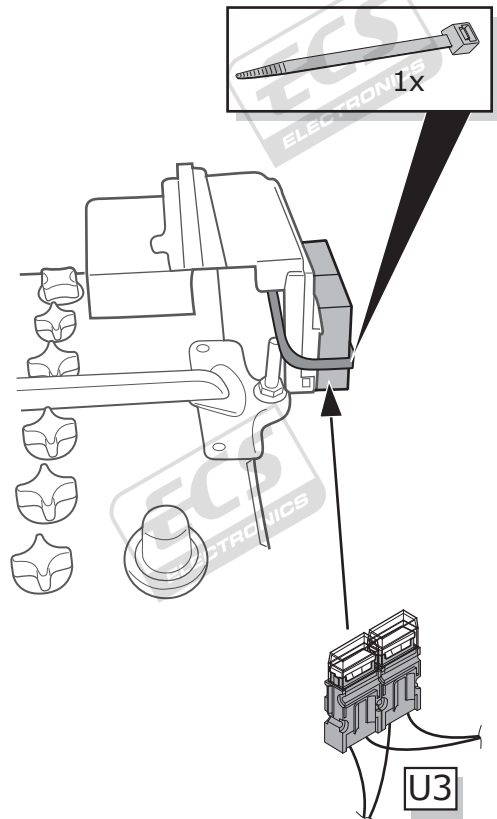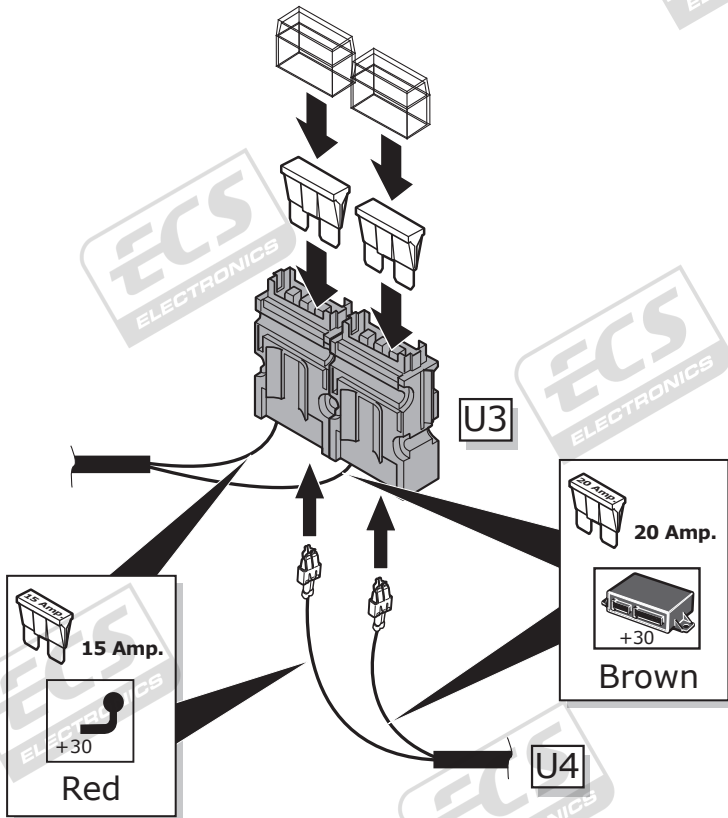

1



2

Pag. 14

27 - 29


Option 2: Outlander PHEV 09/2013- & 2016-

21

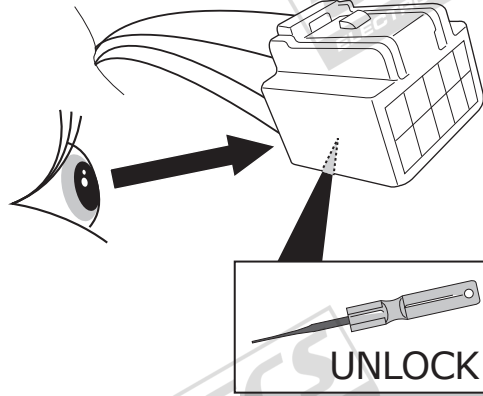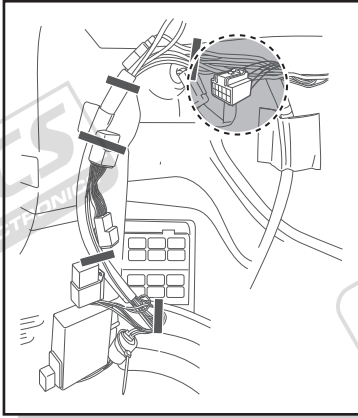


22



Option 1:
positions free

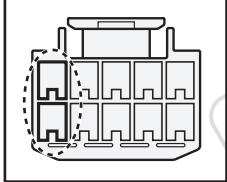


U5

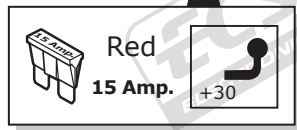

Option 2:
positions taken

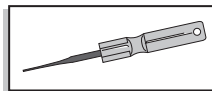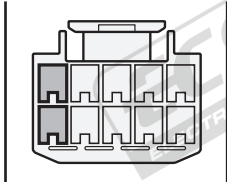


U5

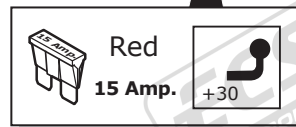

1


2

23

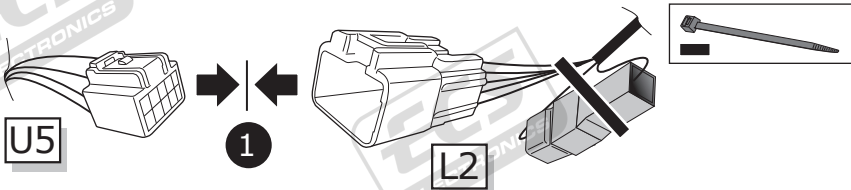

1

L2

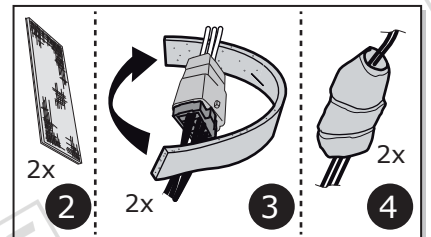

2x

2

2x


3

2x


4

Option 2: Outlander PHEV 09/2013- & 2016-


24

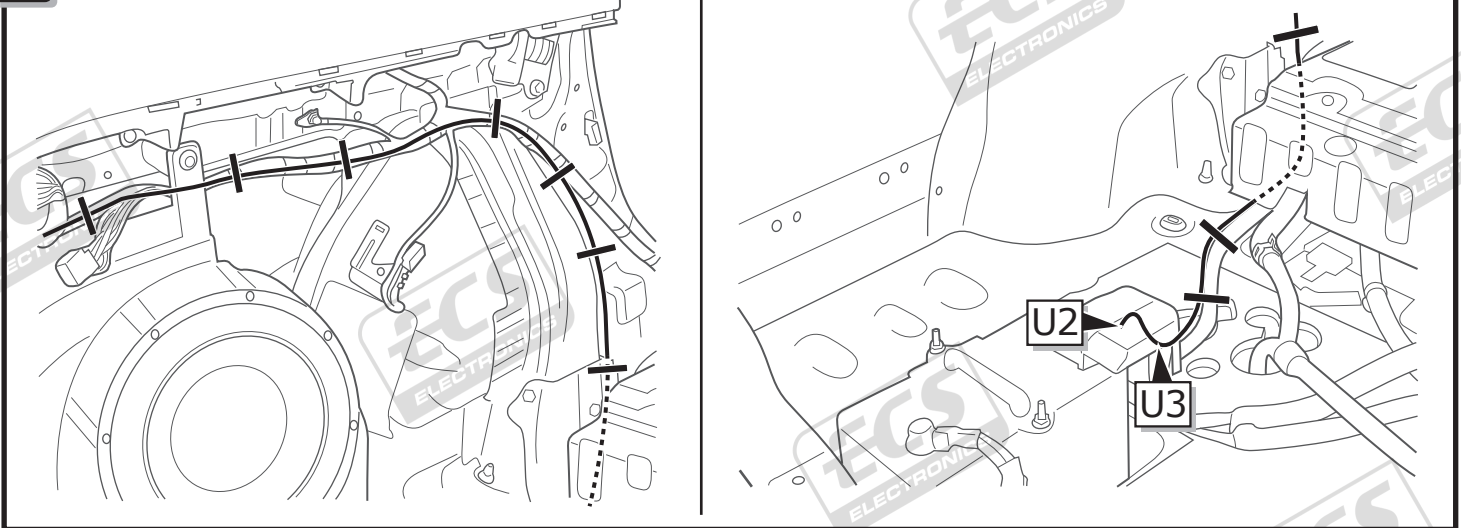


25

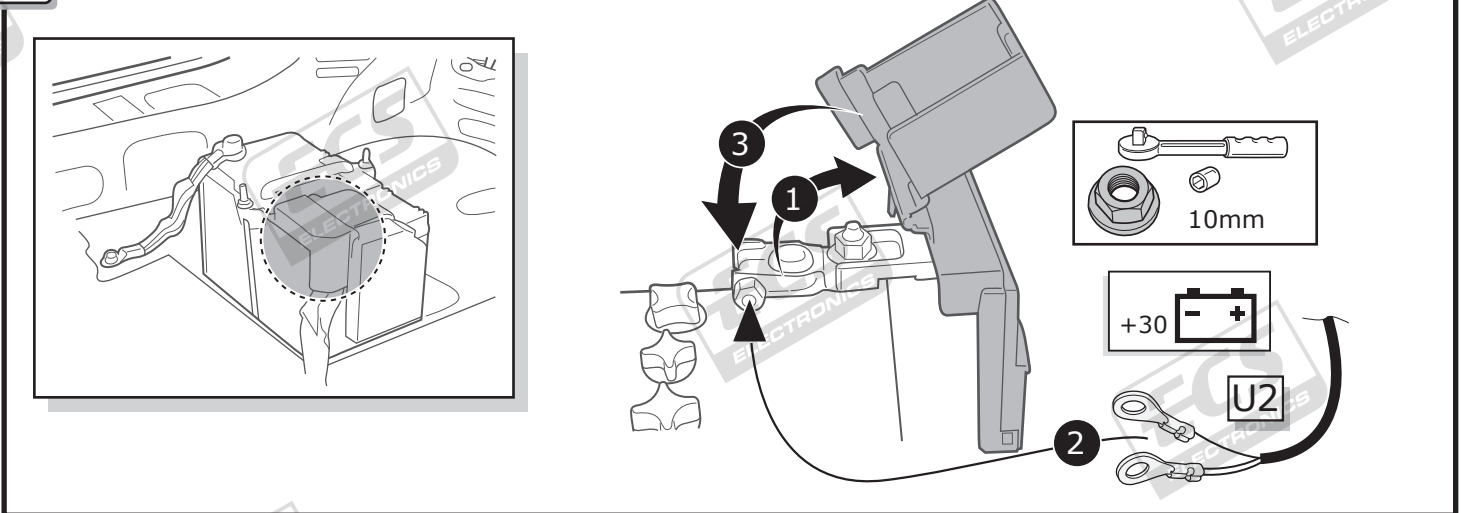

26

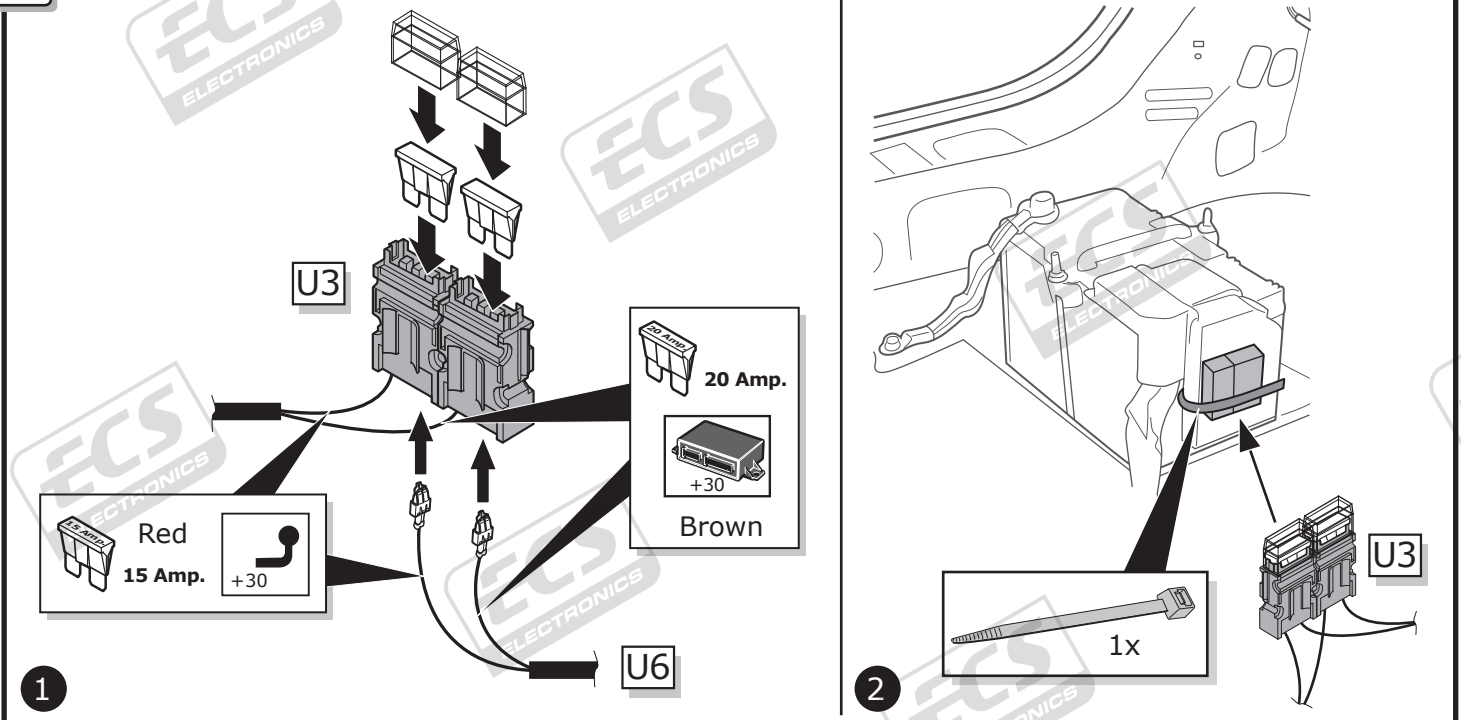

27

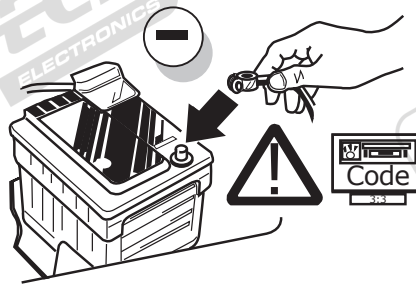


28

TEST ALL THE CIRCUITS WITH A TEST DEVICE WITH THE CORRECT POWER LOAD FOR EACH FUNCTION. A TEST DEVICE WITH LED'S CANNOT BE USED FOR THIS PURPOSE.

INFO

REINSTALL TRIM.

29

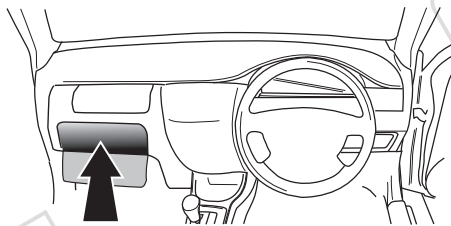

User guide



INFO

SOCKET CONNECTION

DIN/ISO 11446													
	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L	8	9	10	11	12	13
Pmax	21W	2x21W		21W	52W	3x21W	52W	2x21W	180W/15Amp	180W/15Amp			
Colour	Yellow	Blue	White	Green	Brown	Red	Black	Black/Red	Brown/White	Red	White	-	White
						1,00 mm ²				2,50 mm ²			